


NOTES:

LAY ONE BLOCK ON EACH SIDE OF THE STRUCTURE ON ITS SIDE ON THE BOTTOM ROW TO ALLOW POOL DRAINAGE. THE FOUNDATION SHOULD BE EXCAVATED AT LEAST 2" BELOW THE CREST OF THE STORM DRAIN. PLACE THE BOTTOM ROW OF THE BLOCK AGAINST THE EDGE OF THE STORM DRAIN FOR LATERAL SUPPORT AND TO AVOID WASHOUTS WHEN OVERFLOW OCCURS. IF NEEDED, GIVE LATERAL SUPPORT TO SUBSEQUENT ROWS BY PLACING 2x4 WOOD STUDS THROUGH BLOCK OPENINGS.

CAREFULLY FIT HARDWARE CLOTH OR COMPARABLE WIRE MESH WITH 1/2" OPENING OVER ALL BLOCK OPENING TO HOLD GRAVEL IN PLACE.

USE CLEAN GRAVEL, 1/2"-TO 3/4"- IN DIAMETER, PLACED 2" BELOW THE TOP OF THE BLOCK ON A 2:1 SLOPE OR FLATTER AND SMOOTH IT TO AN EVEN GRADE. DOT #57 WASHED STONE IS RECOMMENDED

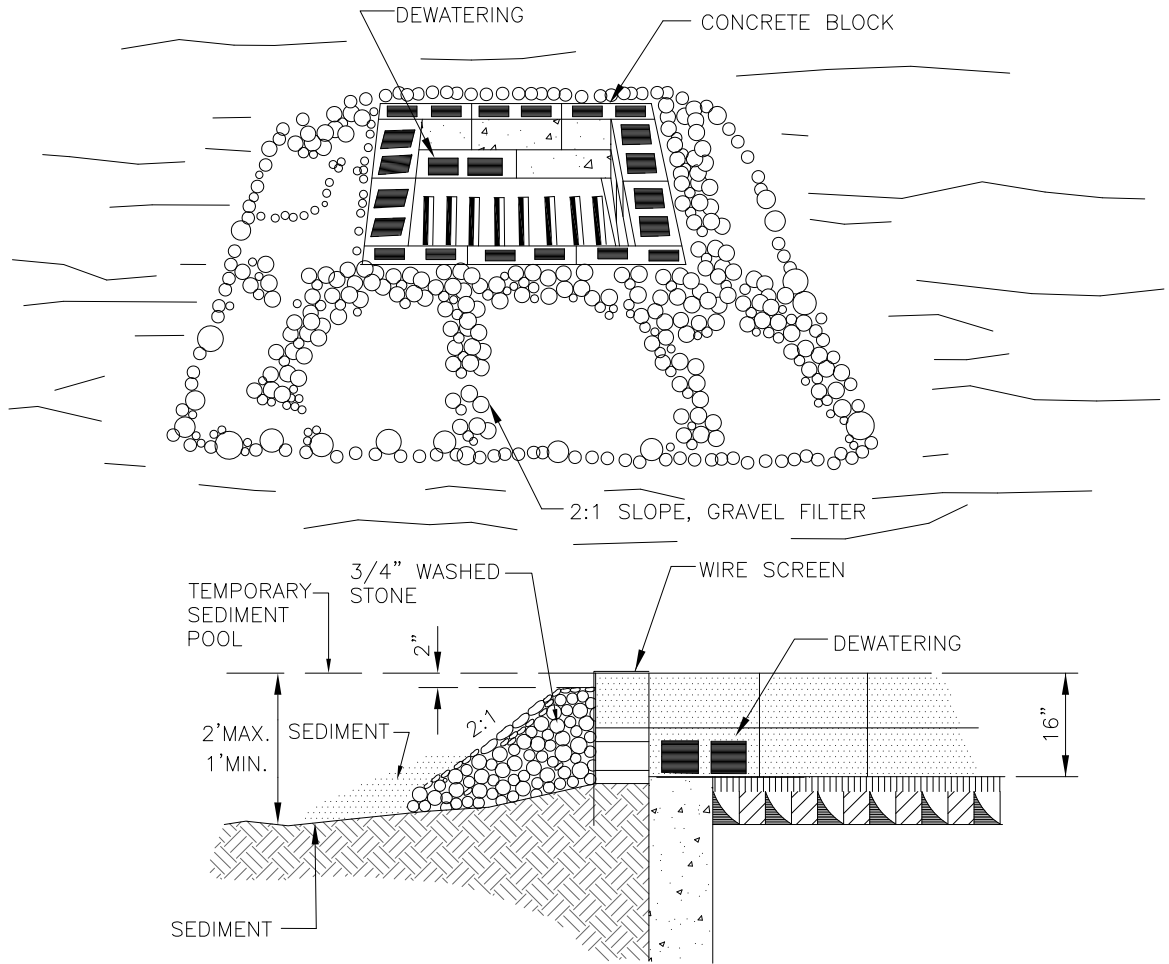

BLOCK AND GRAVEL DROP INLET PROTECTION DETAIL

NO SCALE