


TUBES WITH FLOCCULENT MAY BE INSTALLED BEFORE OR AFTER THE INSTALLATION OF ROLLED EROSION CONTROL PRODUCTS. BEFORE INSTALLATION OF TUBE, SMOOTH AND SHAPE EARTH SURFACE AND REMOVE ALL STONES, ROOTS, OR OTHER DEBRIS GREATER THAN 2 INCHES IN DIAMETER.

IF INSTALLING TUBE ACROSS A DITCH, THEN EXCAVATE A PLACEMENT TRENCH ABOUT 3 INCHES DEEP.

SECTION

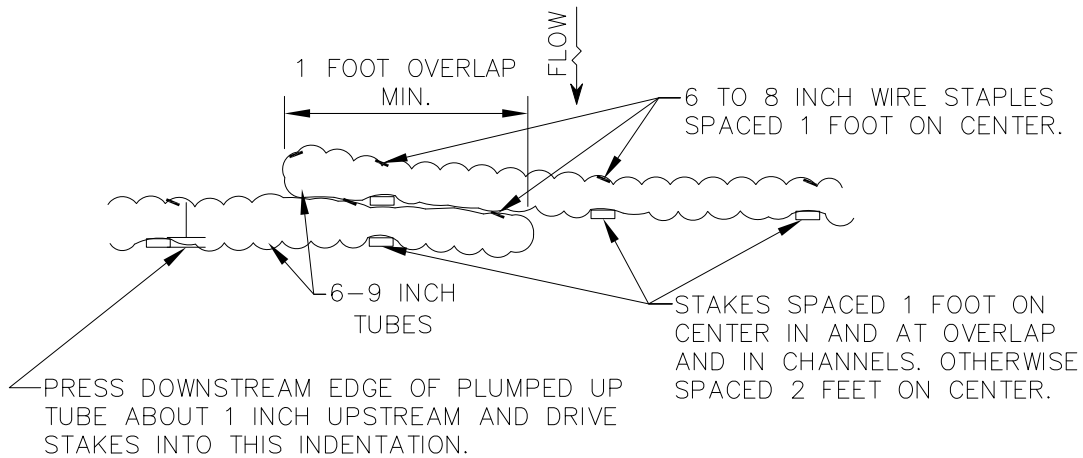

PLAN

GENERAL GUIDELINES FOR SPACING OF TUBE TRENCHES FOR SLOPE INSTALLATIONS	
SLOPE GRADIENT	TUBE INTERVAL
1H:1V	15 FEET
2H:1V	25 FEET
3H:1V	35 FEET
4H:1V	50 FEET

GENERAL GUIDELINES FOR SPACING OF TUBE TRENCHES FOR CHANNEL INSTALLATIONS	
SLOPE	TUBE INTERVAL
2%	25 FEET

REPLACE TUBES WITH FLOCCULENT PER MANUFACTURE'S SPECIFICATIONS.