


INSTALL TRM OR SOD BENEATH TRANSITION MATS AS PER SPECIFICATIONS

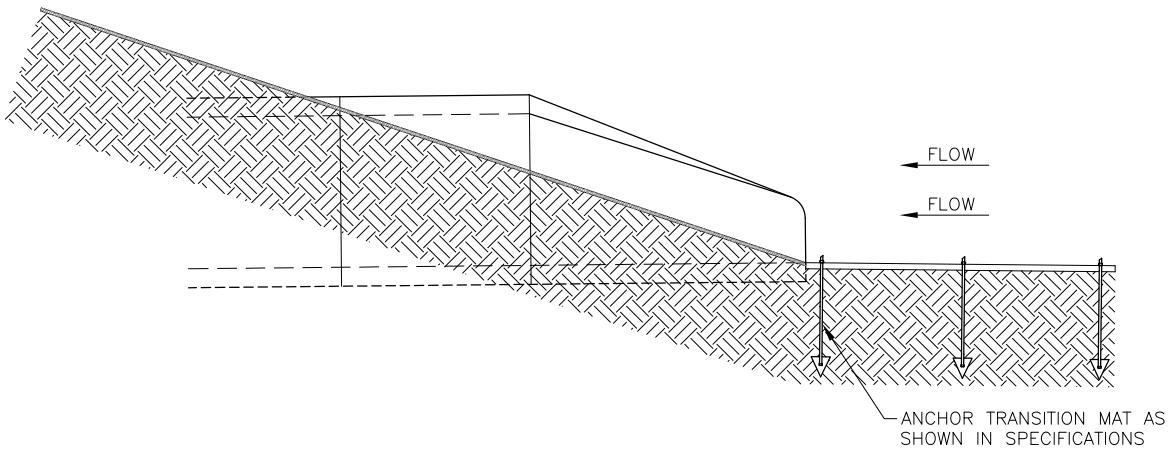

SCOURSTOP TRANSITION MAT PIPE COLLAR SLOPE PROTECTION INSTALLATION DETAILS

NO SCALE
 24" PIPE SHOWN AS EXAMPLE
 INSTALLATION WIDTHS WILL VARY WITH PIPE SIZE