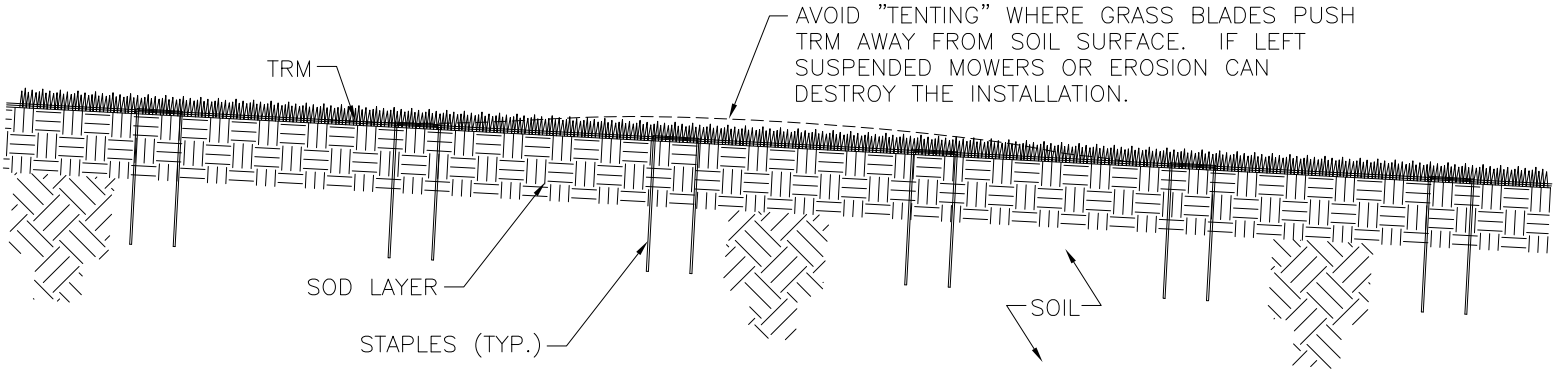

TURF REINFORCEMENT MAT INSTALLED OVER SOD:

- TRIM INSTALLED SOD TO 1" HEIGHT. INSTALL TRM OVER INSTALLED SOD. STRETCH TRM TIGHTLY ACROSS INSTALLATION SURFACE AREA. IRRIGATE SOD AS NEEDED AFTER INSTALLATION TO AID IN ESTABLISHMENT OF VEGETATION.
- SOD DOWNSTREAM OF MAT INSTALLATION AREA DOES NOT NEED TRIMMED BEFORE MAT INSTALLATION.
- TO HOLD SOD IN PLACE, INSTALL WIRE STAPLES AT 8" O.C. WITHIN 4" OF UPSTREAM EDGE OF SOD, AND AT A RATE OF ONE STAPLE PER SQUARE FOOT STAGGERED THROUGHOUT.

SCOURSTOP TRM/SOD COMBINATION INSTALLATION DETAIL

NO SCALE